
CUSTOM MOLDED PRODUCTS SERVICEABLE CHECK VALVES CMP#25830

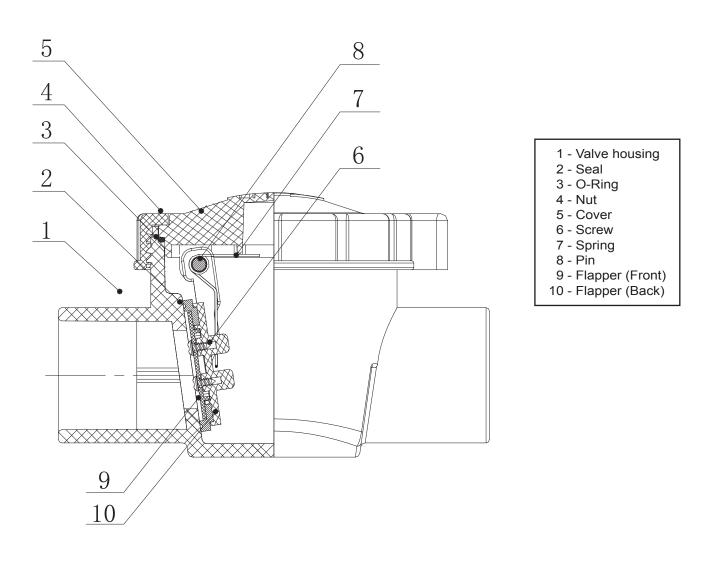

Maintenance:

Inspect the fuction of the check valve by looking through the clear cover. The valve may be taken apart as needed so the o-ring, seal, and body can be checked for damage. Use a silicone lubricant to grease the o-ring before reinstalling.

Valve Location:

Locate the check valve at the lowest possible elevation for optimum performance. The weight of the water will help to seal the check valve. A minimum of an 18" water column is recommended.