

Pro Pace Clock and Shot Clock



User Guide



**Colorado
TIME SYSTEMS**

A **PLAYCORE** Company

F891 Rev.202008

Colorado Time Systems

Corporate Office
1551 East 11th Street
Loveland, CO 80537 USA

Sales: 1-800-279-0111 or +1 970-667-1000

Service: 1-800-287-0653 or +1 970-667-1000
FAX: 970-667-1032

Web: www.coloradotime.com
Email: support@coloradotime.com

Table of Contents

Introduction.....	1
How to Set Intensity and Mode	2
Physical Connections.....	2
Scoreboard/Training	
Input Modes	3
Battery	
Horn	
Wall Mount	
Legs	
Data cable connections	
AC Power connection	
Pace Clock Operation.....	6
Standalone Pace Clock.....	6
Pace Clocks in Series	6
Without Timer or Controller	
With Timer or Controller	
Water Polo Operation	7
Physical Setup	7
Displaying Information	7
Shot time	
Game time	
Time out time	
Team scores	
Time of day	
Training Modes.....	9
Lap counter.....	9
Simple Pace Clock.....	10
Pace clock with Cumulative Splits.....	10
Pace clock with Lap Splits	11
Relay Exchanges	11
Start Reaction	12
Turn Speed	12
Breakout Time.....	13
Start Reaction and Breakout Time	13
Single Lane Timer.....	14
Single Lane Timing:	14
Start Reaction	
Lap Timing (& Length Timing)	
Relay Exchange Timing	
Mid-Race Timing.....	15
Test Mode.....	16
Scoreboard Modes	17
Physical Setup	17

Swimming	18
Lane Times	
Event/Heat	
Training Pace Clock.....	18
Lane Times	
Diving.....	19
Dive Number and Position	
Current Round/Current Diver	
Synchronized Swimming.....	19
Award	
All Sports	19
Time of Day	
Specifications	21
Appendix.....	23
Firmware prior to 2.0.....	23

Introduction

Thank you for purchasing a Colorado Time Systems Pro Pace Clock/Shot Clock.

Introduction

This introductory chapter describes physical features of your Pro Pace Clock/Shot Clock. Subsequent chapters describe how to set up and use your Pro Pace Clock/Shot Clock in a variety of ways.

Pace Clock Operation

Chapter 2, beginning on page 6, describes how to physically set up single or multiple Pro Pace Clocks for basic pace clock operation.

Water Polo

Chapter 3, beginning on page 7, describes using the units for Water Polo as shot clocks and also for displaying game time and other scoreboard data.

Training Modes

Chapter 4, beginning on page 9, describes the training modes, including what the mode does and which other devices are needed for the mode.

Scoreboard Modes

Chapter 5, beginning on page 17, describes using a Pro Pace Clock/Shot Clock to display additional information. The information available for display varies by sport.

How to Set Intensity and Mode

Use the Mode switch on the front panel to set intensity and mode, as follows:

Intensity

When a Pro Pace Clock is turned on, the clock will first display **in** and a number for Intensity. While **in** is displayed, the Mode switch adjusts the intensity of the display. Fifteen levels of intensity are available, from 1 (lowest) to 15/16 (highest). Select the desired intensity.


NOTE: The initial intensity displayed will be the last setting saved before the clock was turned off. It will not change until the knob is turned for the first time.

Mode

After the Mode switch has been in the same intensity setting for 4 seconds, the clock will display the firmware revision, and then the current mode. At this point, the Mode switch changes the mode (and only the mode) until the clock is turned off and then on again.

Physical Connections

The physical connections are on the left side of the front panel.

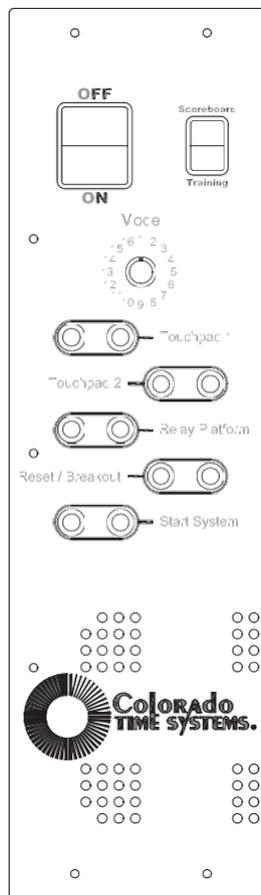

Scoreboard/Training

When the switch is set to **scoreboard**, and the clock is connected to a timer or controller through the quarter-inch phono plug (RS-232) or the round 4-pin connector (RS-485), the clock will display information from the timer or controller based on the clock's Mode switch setting. See Chapter 3, beginning on page 7, for information that can be displayed for Water Polo, and Chapter 5, beginning on page 17, for other information that can be displayed.

When the switch is set to **training**, the training mode that is selected using the 16-position mode switch will be displayed. The various training modes are described in Chapter 4 beginning on page 9.

Input Modes

Most of the various training modes require input from one or more of the following: touchpads, relay platform, pushbutton or start system. Plug the device(s) providing the input into the proper connector(s) on the front panel.


Most input connections are self-explanatory.

Pushbuttons

For all input connectors, a pushbutton operated by a human judge may be connected to provide input; however, some precision in timing will be lost. The pace clock records to a hundredth of a second, but a human with a pushbutton can't come close to that level of accuracy!

Touchpads

There are two touchpad inputs to allow for touchpad input from both ends of the pool. The touchpad inputs are connected to the same internal signal, so it makes no difference which one is used.

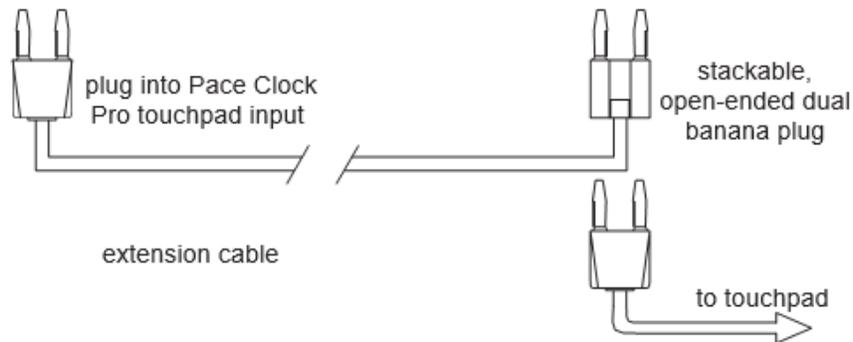

Cabling for far end touchpad input

To take input from touchpads at both ends of the pool, plug the touchpad from one end of the pool into either touchpad input on the Pro Pace clock. Plug the touchpad from the other end into the other touchpad input, using an extension cable (CTS SJ series) with a stackable, open-ended dual banana plug.

Battery

The internal battery can supply power to the pace clock. A fully charged battery will run the unit for a minimum of 6 hours. Leave the unit plugged in overnight to fully charge the battery after use. The battery charges any time the unit is plugged in to AC power.

Horn


The internal horn is controlled by a CTS timer connected to the unit, and requires no user intervention, other than selecting the proper setting on the mode switch, as described in the Water Polo chapter, beginning on page 7.

Wall Mount

The pace clock can be mounted on the wall. First determine the location for your pace clock. It is your responsibility to choose a location where the wall composition or mounting structure can support the 29 lb (13.2 Kg) weight of the pace clock. Use appropriate mounting hardware for the wall substrate, weight of the clock and its environment. The keyhole slots in the back of the clock are .359 inches at the bottom to accommodate the head of the screw, and .172 inches at the top, to accommodate the shank of a #8 screw. They are 25.00 inches apart center to center and 2.50 inches below the top of the clock. Installation must meet all national and local codes.


Legs

The pace clock includes legs. If you would like to use the legs, attach them with the hardware included to the threaded mounting holes in the bottom of the clock.

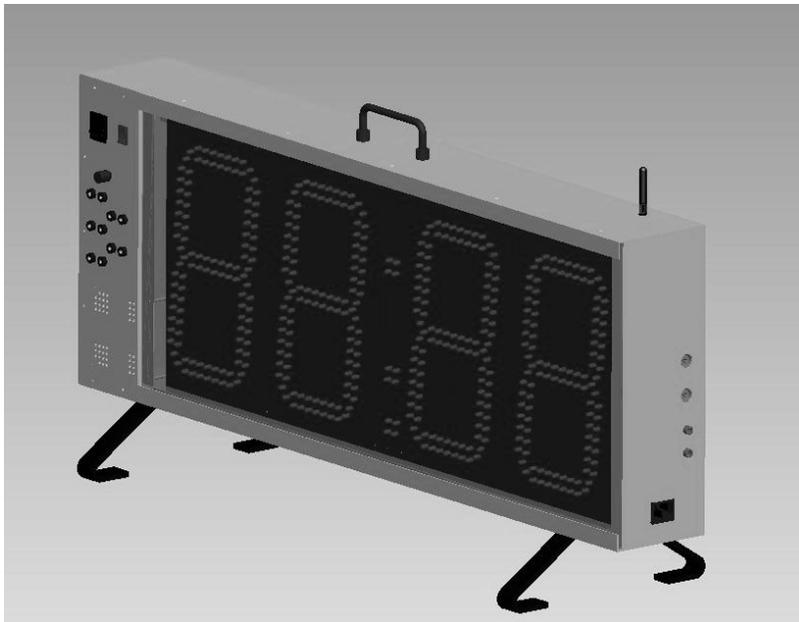

Data cable connections

On the right end panel, there are four data cable connectors and a power receptacle. The upper two data cable connections are round, 4-pin connectors for RS-485; the lower two are quarter-inch phono connectors for RS-232.

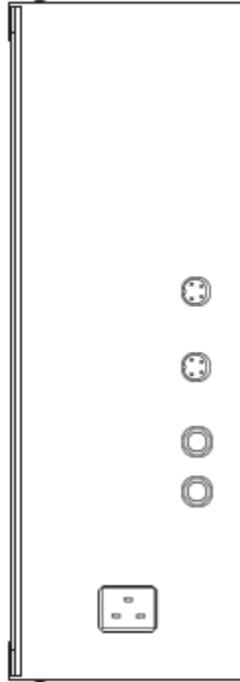

AC Power connection

The power receptacle accepts a standard power cord for 110 VAC. If 220 VAC is required, the power supply can be modified at the factory. Modified units are labeled accordingly.

Pace Clock Operation

Standalone Pace Clock

For simple pace clock operation, turn the Pro Pace Clock on. Set the Scoreboard/Training switch to Training and set the Mode switch to 2. The pace clock will display 02 (for mode 2), and then reset itself to :00 and begin counting up. After displaying 59:59, the display rolls over to :00.

Pace Clocks in Series

Without Timer or Controller

To run a series of pace clocks without an external controller, set the Scoreboard/Training switch on the front panel of the first pace clock to Training, and set the Mode switch to 2. Set the other pace clock(s) to Scoreboard and Mode 1. Connect the pace clocks with data cables using the round 4-pin (RS-485) connectors. All connected pace clocks will display the same information.

Turn the pace clocks on with the power switch on the front panel. The pace clocks will begin counting up from zero, displaying time as minutes and seconds. After displaying 59:59, the displays will roll over to :00.

With Timer or Controller

A clock or series of clocks can be controlled using a CTS timer or pace clock controller. The clock(s) will display information from the timer or pace clock controller based on the setting of the Mode dial. See Chapter 3 starting on page 7 for specifics about Water Polo, and Chapter 5 starting on page 17 for specifics on other sports.

Water Polo Operation

Mode Switch Setting	Display
1	Game Clock
3	Shot Clock
5	Time Out Clock
12	Team Scores
16	Time of Day

Physical Setup

Clocks connected to a CTS timer running Water Polo software can be used to display all of the information shown in the chart above.

Set the Scoreboard/Training switch to Scoreboard. Connect one clock to the timer through the scoreboard output port with a data cable using either the round 4-pin (RS-485) connector or the quarter-inch phono connector (RS-232), whichever your timer supports. Connect the clocks to each other with the same type of data cable.

Each clock will display the information based on its mode setting: a series of connected clocks will display different information from one another if they are set to different mode settings.

Displaying Information

Clocks can be used to display shot time and other information for Water Polo, with the timer default settings. Connect them as described in Physical Setup. Turn the clock(s) on. Set the Training/Scoreboard switch to Scoreboard. The clock(s) will display information from the CTS timer based on the setting of the Mode dial.

See your CTS timer Water Polo software manual for information about shot time, game time, time out time, team scores or setting time of day.

Shot time

To display shot time on clocks, the CTS timer must be set to display Scoreboard Channel 02 (shot time) on Module 03. Set the Mode switch to 3 on these clocks. The CTS timer will automatically start and stop the shot clocks and sound the horns.

Game time

To display game time on a clock, the CTS timer must be set to display Scoreboard Channel 01 (game time) on Module 01. On this clock, set the Mode switch to 1. The CTS timer will automatically start and stop the game clock and sound the horn at the end of each period.

Time out time

To display the amount of time remaining in a time out on a clock, the CTS timer must be set to display Scoreboard Channel 12 (time out time) on Module 05. On this clock, set the Mode switch to 5. The CTS timer will automatically start and stop the time out clock.

Team scores

To display team scores, the CTS timer must be set to display Scoreboard Channel 5 (team scores) on Module 0D. On this clock, set the Mode switch to 12. The CTS timer will automatically display and update the team scores. By default, the dark team score will be displayed on the two left digits, and the light team score will be displayed on the two right digits. On newer timers, this can be reversed through timer setups.

Time of day

To display the time of day, the CTS timer must be set to display Scoreboard Channel 10 (time of day) on Module 16. On this clock, set the Mode switch to 16. The CTS timer or controller will automatically send the time of day to the clock.

Training Modes

Mode #	Mode Description	See Page #
1	Lap counter	9
2	Simple pace clock	10
3	Pace clock with cumulative splits	10
4	Pace clock with Lap Splits	11
5	Relay Exchanges	11
6	Start Reaction	12
7	Turn Speed	12
8	Breakout Time	13
9	Start Reaction and Breakout Time	13
10, 11, 12, 13, 14	Single Lane Timer (1, 2, 3, 4 or multiple laps)	14
15	Mid-race Timer	15
16	Test Mode	16

Lap counter

Mode 1

Equipment required:

Touchpad required; start system or pushbutton can be used to reset the clock.

Set up:

Connect the touchpad to either Touchpad input. If using a start system or pushbutton for resetting the display, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input.

Operation:

The clock displays 01, indicating mode 1. The display will flash, and then show 0, indicating 0 laps completed. Each valid touchpad hit will cause the display to count up by 1. A start input (either a start signal from the start system or one click on a pushbutton connected to the start input) or a double click on a pushbutton connected to the reset/breakout input will reset the counter to 0.

Simple Pace Clock

Mode 2

Equipment required:

None required for basic operation; start system or pushbutton can be used to reset the clock.

Set up:

If using a start system or pushbutton for resetting the clock, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input.

Operation:

The clock displays 02, indicating mode 2. The display will flash, display :00, and begin counting up, showing the time as minutes and seconds. After displaying 59:59, the display will roll over to 00:00. A start input or a double click from the reset input will reset and start the clock.

Pace clock with Cumulative Splits

Mode 3

Equipment required:

Touchpad required; start system or pushbutton can be used to reset the clock.

Set up:

If using a start system or pushbutton for resetting the clock, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input. Connect the touchpad to either Touchpad input.

Operation:

The clock displays 03, indicating mode 3. The display will flash, display :00, and begin counting up, showing the time as minutes and seconds.

At each valid touchpad hit, the display shows the time of the touchpad hit (cumulative split) in seconds and hundredths (SS.HH). Meanwhile, the running time continues internally. Following the cumulative split display the clock will resume displaying the running time as minutes and seconds. Once the running time is above a minute, the time of the touchpad hit is shown alternating between seconds and hundredths (SS.HH) and minutes and seconds (MM:SS).

A start input or a double click from the reset input will reset and start the clock any time the running time is displayed.

Pace clock with Lap Splits

Mode 4

Equipment required:

Touchpad required; start system or pushbutton can be used to reset the clock.

Set up:

Connect the touchpad to either Touchpad input. If using a start system or pushbutton for resetting the clock, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input.

Operation:

The clock displays 04, indicating mode 4. The display will flash, display :00, and begin counting up, showing the time as minutes and seconds.

At each valid touchpad hit, the display shows the time of the touchpad hit (lap split) in seconds and hundredths (SS.HH). The running time is reset to 0 at the touchpad hit and continues running internally. Following the lap split display, the clock will resume displaying the running time as minutes and seconds.

A start input or a double click from the reset input will reset and start the clock any time the running time is displayed.

Relay Exchanges

Mode 5

Equipment required:

Touchpad and relay judging platform (RJP).

Set up:

Connect the touchpad to either Touchpad input. Connect the RJP to the Relay Platform input.

Operation:

The clock displays 05, indicating mode 5. The numbers on the display go blank, leaving the colon and rightmost decimal lit. The clock is waiting to record a relay exchange.

RJP input times are recorded, and the first touchpad hit is recorded. For a legal relay exchange (the touchpad hit occurred before the relay takeoff), the display shows the relay exchange time in seconds and hundredths (SS.HH). For an illegal relay exchange (the touchpad hit occurred after the relay takeoff), the display shows the difference between the two, preceded by a minus sign. If no valid RJP input is detected within 2 seconds of a touchpad input, "Err" will be displayed on the clock.

The clock displays the exchange time for 10 seconds, and then automatically resets itself for the next exchange.

Start Reaction

Mode 6

Equipment required:

Start system or pushbutton, and touchpad for backstroke starts or RJP for starting block starts. Optional pushbutton for reset.

Set up:

Connect the start system or a pushbutton to the Start System input. For backstroke starts, connect the touchpad to either Touchpad input. For starting block starts, connect the RJP to the Relay Platform input. If you would like to use a pushbutton to reset the clock after a start has been recorded, connect a pushbutton to Reset/Breakout.

Operation:

The clock displays 06, indicating mode 6. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in hundredths of a second for 2 seconds. All touchpad or RJP inputs detected during this time are recorded, and the last one recorded is displayed at the end of the 2-second window.

The start reaction time (the difference between the start input and the swimmer's departure) is displayed until the clock is reset with a double click from the Reset/Breakout input, or a new start input.

If a start input is received and no RJP or touchpad input is detected within 2 seconds, the clock will display "Err."

Turn Speed

Mode 7

Equipment required:

Touchpad

Set up:

Connect the touchpad to either of the Touchpad inputs.

Operation:

The clock displays 07, indicating mode 7. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a touchpad input (typically hand touch). All touchpad releases detected during the next 3 seconds are recorded. The last one recorded (departure) is displayed at the end of the 3-second window, showing the time it took for the turn (the difference between the two).

The clock displays the turn time for 10 seconds, and then automatically resets itself for the next turn.

Breakout Time

Mode 8

Equipment required:

Start system, and breakout timer or pushbutton.

Set up:

Connect the start system to the Start System input, and connect the pushbutton or other breakout timer to the Reset/Breakout input.

Operation:

The clock displays 08, indicating mode 8. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in hundredths of a second until a breakout input is detected.

The breakout time (the difference between the start input and breakout input) is displayed until the clock is reset with a double click from the Reset/Breakout input, or until a new start input starts the clock from zero.

Start Reaction and Breakout Time

Mode 9

Equipment required:

Start system, breakout timer or pushbutton, and touchpad or relay platform.

Set up:

Connect the start system to the Start System input, and connect the pushbutton or other breakout timer to the Reset/Breakout input. Connect the touchpad to either Touchpad input or connect the RJP to the Relay Platform input.

Operation:

The clock displays 09, indicating mode 9. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in hundredths of a second for 2 seconds. All touchpad or RJP inputs detected during this time are recorded, and the last one recorded is displayed at the end of the 2-second window. The clock continues to count internally while it displays this time (start reaction time). Running time resumes on the display, until a breakout/reset input is detected. The breakout time is then displayed until the clock is reset with a double click from the Reset/Breakout input or a new start input.

Single Lane Timer

Modes: 10, 11, 12, 13 and 14

1, 2, 3, 4 or multiple laps with optional Start Reaction Time and optional Relay Exchange Time

Equipment required:

Start system or pushbutton, and touchpad; relay platform for start reaction time from starting block starts; pushbutton for timing more than 4 laps

Set up:

Connect the start system or the pushbutton to the Start System input and connect the touchpad to either Touchpad input.

For start reaction time from starting block starts, connect the RJP to the Relay Platform input. For start reaction time from backstroke starts, inputs from the touchpad that is already connected will be recorded and used.

For mode 14 (multiple lap timing), connect a pushbutton to the Reset/Breakout input.

Operation:

The clock displays 10, 11, 12, 13 or 14 indicating the mode. These modes are the same except for the number of touchpad inputs expected. In all five of these modes, the numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in seconds.

Single Lane Timing:

Start Reaction

The first option in all five modes is start reaction time. All touchpad or RJP inputs detected during the initial 2 seconds from start input are recorded, and the last one recorded is displayed at the end of the 2-second window. The start reaction time (the difference between the start input and the swimmer's departure) is displayed, after which the display resumes counting up in seconds.

If there are no touchpad or RJP inputs during the 2 seconds after the start input, the display simply continues to count up in seconds.

Lap Timing (& Length Timing)

For lap timing, this assumes that the touchpad is at the same end of the pool as the starting blocks, and therefore the swimmer swims to the other end and back before touching the touchpad. Length timing can also be done, with a touchpad at each end of the pool: one connected to the Pro Pace Clock at Touchpad 1 and the other at Touchpad 2 (see page 3 for cabling this option).

At each valid touchpad input, the display shows the time elapsed since the start input (cumulative split), alternating between seconds (MM:SS) and hundredths (SS.HH). If the elapsed time is less than a minute, the display will not alternate; it will show the time in SS.HH format.

In mode 10 (single lap timing), the display shows the first elapsed time until a reset or new start input is detected.

In mode 11 (two lap timing with splits), running time continues internally while the display shows the cumulative split. The display then resumes running time until a second touchpad input is detected, indicating a second lap completed. This final time is displayed until a reset or a new start input is detected.

In mode 12 (three lap timing with splits), running time continues internally while the display shows the cumulative split. The display then resumes running time after displaying each cumulative split until the third touchpad input. This final time is displayed until a reset or a new start input is detected.

In mode 13 (four lap timing with splits), running time continues internally while the display shows the cumulative split. The display then resumes running time after displaying each cumulative split until the fourth touchpad input. This final time is displayed until a reset or a new start input is detected.

In mode 14, running time continues internally while the display shows the cumulative split. The display then resumes running time after displaying each cumulative split until a single Reset input is detected. The clock then stops timing after the next touchpad hit. This final time is displayed until a reset or a new start input is detected.

Relay Exchange Timing

All Single Lane Timing Modes with multiple laps (or lengths, if length timing is being done) have optional relay exchange timing capabilities at each touchpad hit before the final one.

The first touchpad hit (cumulative split) is recorded, disabling the touchpad and starting a 2-second window. During the 2-second window, RJP input times continue to be recorded. After the 2-second window expires, RJP input will be disabled and the cumulative split will be displayed.

If a valid RJP input was detected, the display will then show the relay exchange time. For a legal relay exchange (the touchpad hit occurred before the relay takeoff), the display will then show the relay exchange time in seconds and hundredths (SS.HH). For an illegal relay exchange (the touchpad hit occurred after the relay takeoff), the display shows the difference between the two, preceded by a minus sign.

If no valid RJP input is detected within 2 seconds before or after a touchpad input, only the cumulative split will be displayed on the clock, as described in the Lap & Length Timing section above.

Mid-Race Timing

Mode 15

Mid-race timing is designed to time the middle portion of a race, eliminating both the start and the finish. It can be done with touchpads at both ends of the pool, or only at one end.

- 1) With a touchpad at one end only, the timing will include one lap and three turns.
- 2) With a touchpad at each end, the timing will include one length and two turns.

Equipment required:

Start system or pushbutton, and touchpad(s).

Set up:

Connect the pushbutton to the Reset/Breakout input or connect the start system or a pushbutton to the Start System input. If using one touchpad, connect it to either Touchpad input. If using touchpads at both ends of the pool, connect the touchpad from one end of the pool into either touchpad input on the Pro Pace clock. Plug the touchpad from the other end into the other touchpad input, using an extension cable (CTS SJ series) with a stackable, open-ended dual banana plug (see page 3).

Operation:

The clock displays 15, indicating mode 15. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a touchpad input (first hit of turn). The first touchpad input starts the clock, and the display begins counting up in hundredths of a second. The touchpad input is inactive for 3 seconds after the first hit, to allow the swimmer to exit the pad.

The clock records the next touchpad hits. The last one recorded (push off) is compared with the initial touchpad touch and the difference between the two is displayed.

With a touchpad at one end, this is the time it took the swimmer to make an initial turn, swim down the lane, turn at the other end, swim back and complete the turn at the end with the touchpad.

With a touchpad at each end, this is the time it took the swimmer to make an initial turn, swim down the lane and complete the turn at the other end.

The clock displays the mid-race time until the clock is reset with a double click from the Reset/Breakout input, or a start input.

Test Mode

Mode 16

Equipment required:

Depends upon testing.

Set up:

Follow specific instructions from CTS customer service representative.

Operation:

The clock displays 16, indicating mode 16. It will then cycle through a digit test. Note that the decimal after the third digit is never used and will not light during the digit test.

Input ports can also be tested. When an input port receives a signal the clock shows which input port was triggered, as shown:

Touchpad	PAd
RJP	rJP
Start	StArt
Reset/Breakout	rESET

Scoreboard Modes

Mode Switch Setting	Sport	Display
1-10	Swimming & Training Pace Clock	Lane Times
11	Swimming	Event/Heat
13	Diving	Dive Number and Position
14	Diving	Current Round/Current Diver
15	Synchro	Award
16	All	Time of Day

For details about displaying Water Polo information, please see Chapter 3, beginning on page 7.

Physical Setup

A pace clock or series of pace clocks can be controlled using a CTS timer or pace clock controller. The connected clock(s) will display information based on the setting of the Mode dial on the clock, as listed in the chart above, and the sport the timer is running.

Set the Scoreboard/Training switch to Scoreboard. Connect one pace clock to the timer at the timer's scoreboard output port or connect it to the pace clock controller. Use a data cable with either a round 4-pin (RS-485) connector or a quarter-inch phono connector (RS-232), whichever your timer or controller supports. If you are connecting multiple pace clocks, connect the pace clocks to each other with the same type of data cable.

Each clock will display the information based on its mode setting; a series of connected clocks can display different information from one another if they are set to different mode settings.

Swimming

Lane Times

Modes 1 - 10

Connect the clock(s) to a CTS timer running Swimming software. When a clock is switched to one of the modes 1 through 10, it will briefly display the mode number (01 through 0A). It will then display the minutes and seconds for the corresponding lane, either running time or split time.

Event/Heat

Mode 11

Connect the clock(s) to a CTS timer running Swimming software. When a clock is switched to mode 11 it will briefly display E: H for Event/Heat. It will then display the current event number on the left two digits and the current heat number on the right two digits.

Training Pace Clock

Lane Times

Modes 1 - 10

Connect the clock(s) to a CTS timer running Pace Clock software, or to a Pace Clock Controller. When a clock is switched to one of the modes 1 through 10, it will briefly display the mode number (01 through 0A). It will then display the time for the current lane.

Diving

Dive Number and Position

Mode 13

Connect the clock(s) to a CTS timer running Diving software. When a clock is switched to mode 13, it will briefly display **dn** for Dive Number. It will then display the dive number and position for the current diver. If the dive number is 4 characters long (e.g., 101B or 403C), the display will show the entire dive number. If the dive number is 5 characters long (e.g., 5132D or 6142B), the display will alternate between the first four characters and the final character on a half second basis.

Current Round/Current Diver

Mode 14

Connect the clock(s) to a CTS timer running Diving software. When a clock is switched to mode 14, it will briefly display **r: d** for Round and Diver. It will then display the current round number on the left two digits and the current diver number on the right two digits. This mode is helpful for large meets so that divers who may not be able to see the main scoreboard easily can still see the current state of the event and know when they will be diving again.

Synchronized Swimming

Award

Mode 15

Connect the clock(s) to a CTS timer running Synchronized Swimming software. When a clock is switched to mode 15, it will briefly display **SY** for Synchro. It will then display the tabulated award for the current routine to the hundredths place (it will not show the thousandths place).

All Sports

Time of Day

Mode 16

Connect the clock(s) to a CTS timer running any sport's software, or to a Pace Clock Controller. When a clock is switched to mode 16, it will briefly display **tod** for Time of Day. It will then display the current time of day as set on the timer or controller.

Specifications

Devices set to 115V

AMPS: 3.0 V: 115 Hz: 60

Conforms to Std. UL863

Certified to CAN/CSA Std. C22.2#207



Devices set to 230V

AMPS: 1.5 V: 230 Hz: 50

Conforms to Std. UL863

Certified to CAN/CSA Std. C22.2#207



For all devices:

No operator serviceable parts. Contact factory for replacement parts/service.

CAUTION: Servicing is to be performed only while device is disconnected from power.

ADVERTISSMENT: Pour entretenir est être execute seulement pendant que l'appareil est débracné du pauvoir.

FCC Compliance Statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Unauthorized modifications or changes made to this device not expressly approved by the party responsible for compliance voids the user's authority to operate the equipment.


Appendix

Firmware prior to 2.0

There was a slight change in the settings of the Mode dial between Firmware 2.0 and earlier versions. The manual describes Firmware 2.0 and above; if you are using this manual and have a version of firmware below 2.0, use this chart to determine proper setting of the Mode dial.

The clock displays its firmware version right after it is turned on and has displayed the intensity setting.

Scoreboard Displays		Mode Switch Setting	
Display	Sport	Firmware 2.0 and above	Firmware 1.x
Game Clock	Water Polo	1	2
Shot Time	Water Polo	3	4
Time Out Clock	Water Polo	5	6
Team Scores	Water Polo	12	N/A
Lane Times	Swimming & Training Pace Clock	1-10	2-11
Event/Heat	Swimming	11	N/A
Dive Number and Position	Diving	13	N/A
Current Round/Current Diver	Diving	14	N/A
Award	Synchro	15	N/A
Time of Day	All	16	N/A
Training Displays	Scoreboard/Training Switch		
Lead (Display & Send info)	Training	Set to desired training mode (see Chapter 4 beginning on page 9).	
Follow (Receive & display that info)	Scoreboard	1	2

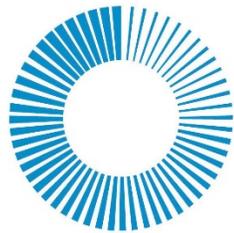

**Colorado
TIME SYSTEMS**
A **PLAYCORE** Company

Customer Service Department
www.coloradotime.com
Email: support@coloradotime.com
Phone: +1 970-667-1000
Toll Free U.S. and Canada 800-287-0653
Fax: +1 970-667-1032