
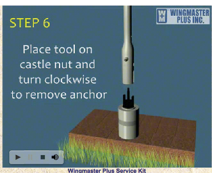
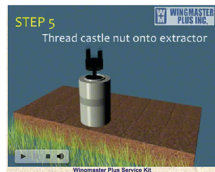
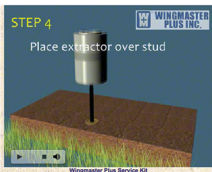
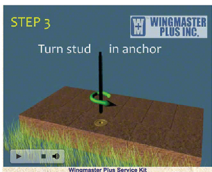
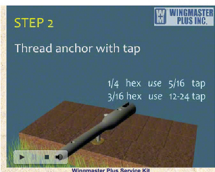
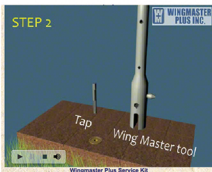


# Wingmaster Plus Service Kit With Anchor Extractor

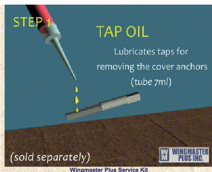

## Directions:

Step 1. Lubricate with tap oil (sold separately).

Step 2. Thread anchor with tap.

Step 3. Turn stud in anchor.

Step 4. Place extractor over stud.

Step 5. Thread castle nut onto extractor.

Step 6. Place tool on castle nut and turn clockwise to remove anchor.

Step 7. Place square tip of stud into tool to remove old anchor from extractor.

Step 8. Place new anchor in existing hole.