 


INLINE ZINC ANODE INSTRUCTIONS

PART# 104C (1.5" & 2")

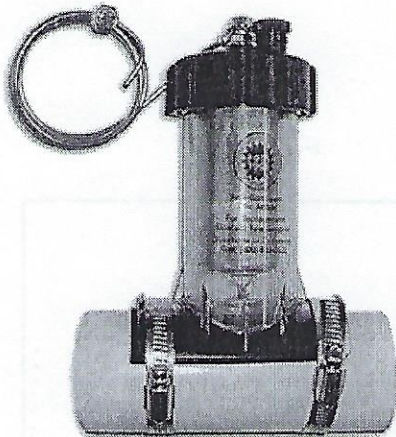

- The anode should be installed between the filter and heater. The other option is between the pool pump and filter.

- The anode can be installed upside down, vertical, or horizontal.

1. Turn off the pump.
2. Place the rubber gasket at the desired installation spot.
3. Drill a 1/2" hole in the center of the gasket. (Fig. 1)
4. Install the anode housing over the gasket using the two hose clamps.
*Be sure to tighten the clamps evenly. (Fig. 2)
5. Attach the bonding wire to the pool equipment copper bonding wire, using the bonding wire connector. (Fig. 3)
6. Turn the pump on and bleed the air out using the bleeder valve on the top of the cap.

NOTE:

The zinc anode will gradually sacrifice itself (erode). A scaly residue will occur and should be removed with sandpaper about every six months.

The anode should be replaced when it is half its original size. The replacement kit is part #104R-KIT. (Fig. 4)

If you have any questions, please call Herb at 805-644-2333.

Fig. 1

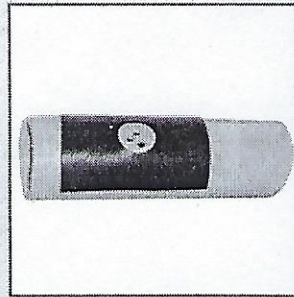 


Fig. 2

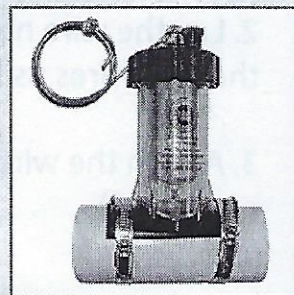 


Fig. 3


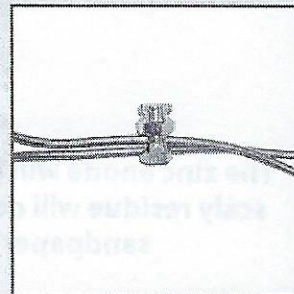 


Fig. 4

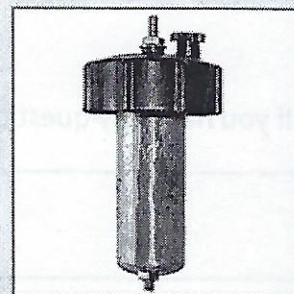 

POOL TOOL COMPANY[®]
pooltool.com

Phone: 805-644-2333


Address:

4848 Colt st. #1
Ventura CA 93003


BONDING WIRE KIT INSTRUCTIONS

1. Uncoil the bonding wire.
2. Lay the wire next to the existing wire and connect the two wires using the split bolt. (Fig 1)
3. Attach the wire to the terminal in the center of the cap. (Fig 2)

 (Fig 1)

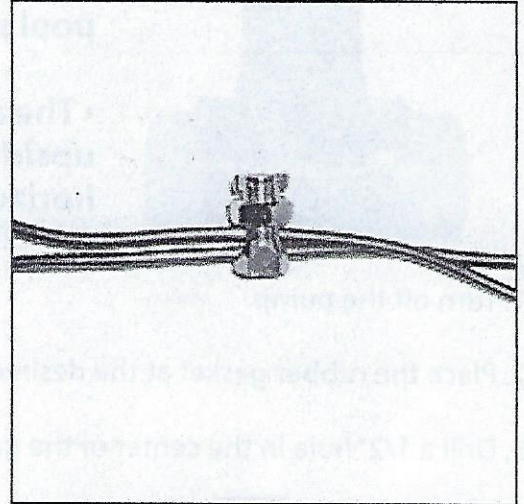

(Fig 2)

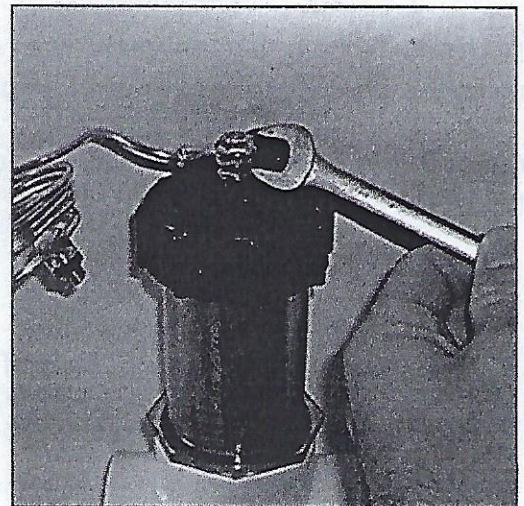 

NOTE:

The zinc anode will gradually sacrifice itself (erode). A scaly residue will occur and should be removed with sandpaper about every six months.

The anode should be replaced when it is half its original size. This takes approximately 3 years.

If you have any questions, please call Herb at 805-644-2333.



POOL TOOL COMPANY®
pooltool.com

Phone: 805-644-2333

Address:
4848 Colt st. #10
Ventura CA 93003