

Two-Step Valve Operating Instructions



Scan for our online video



Open valve so largest opening is exposed.

Fill inflatable to 90% capacity.

You will need to use a rag or paper towel to help cover the opening so air does not escape.



Close the next valve and continue inflating to full capacity. This valve is **one way** and will **only allow air to enter the inflatable**. Air will not escape.



Close valve to secure.

POOLMASTER®

We Make Water Fun!

770 Del Paso Road, Sacramento, CA 95834-0308

Questions or comments? Call:

800.854.1492

poolmaster.com

info@poolmaster.com