

TREO LAMP REPLACEMENT


REQUIRED TOOLS: #2 PHILLIPS SCREWDRIVER

1




TURN OFF MAIN
POWER SOURCE
AT BREAKER

2

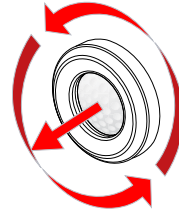


TWIST THEN
PULL OUT

3

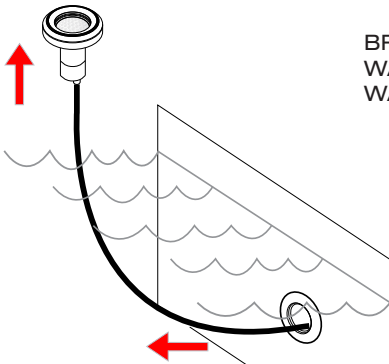


BRING LAMP ABOVE
WATER OR LOWER
WATER LEVEL


4

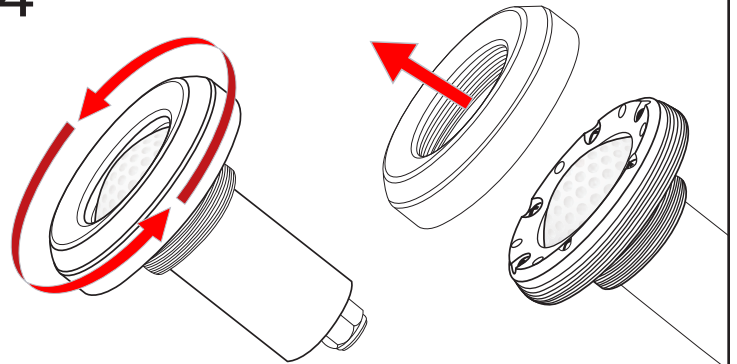


5

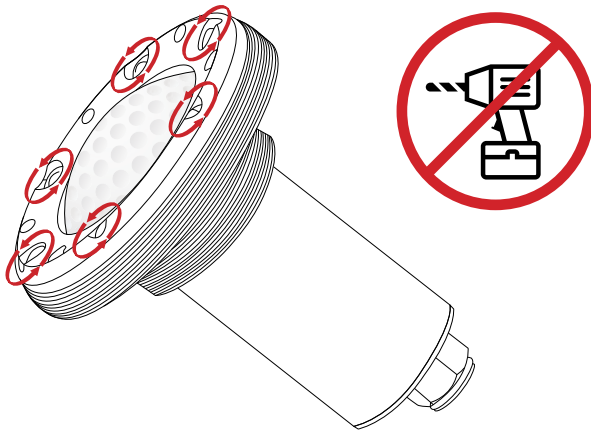


6

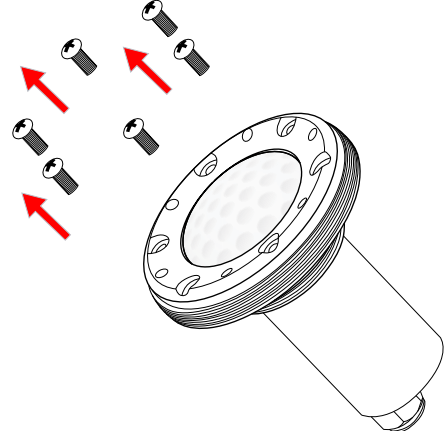


7

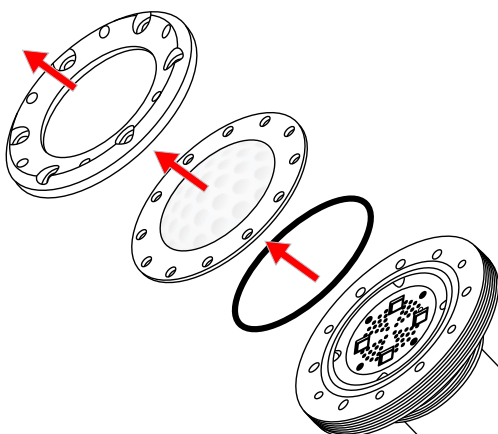


8

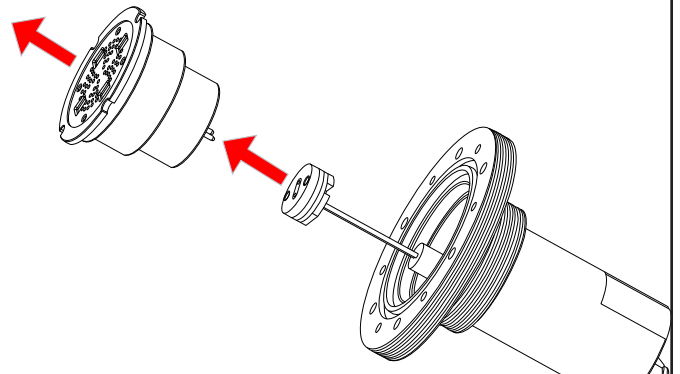


9

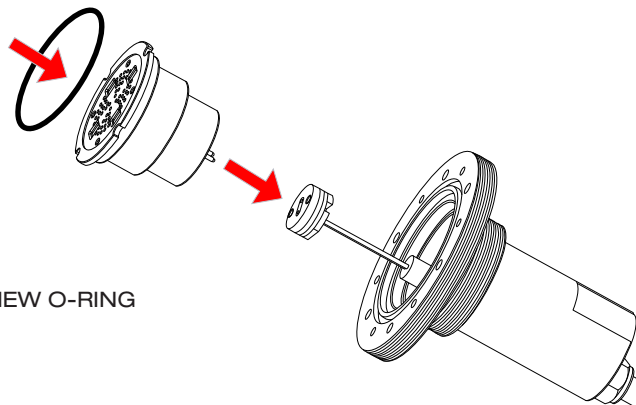


10

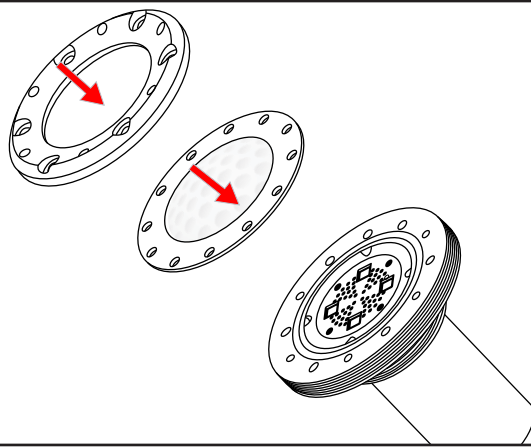


11

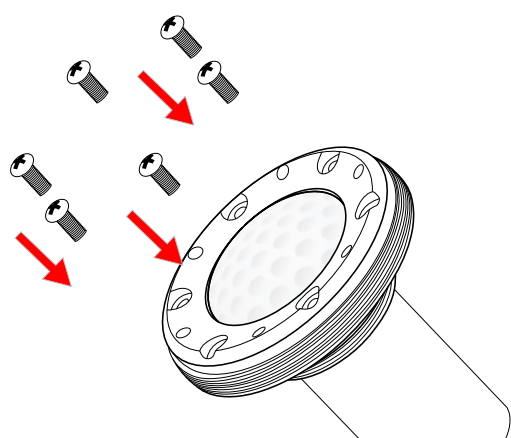


12

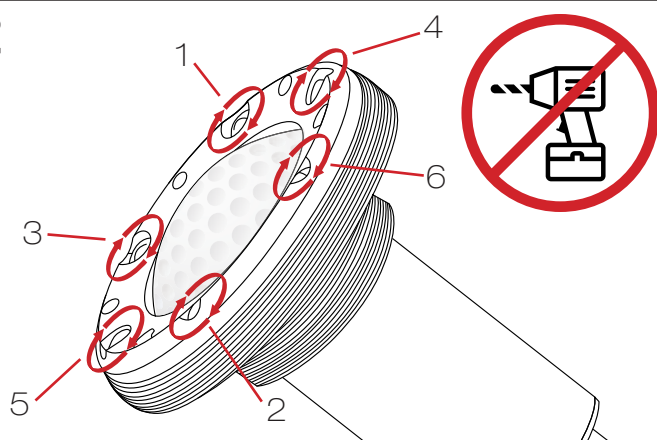

13

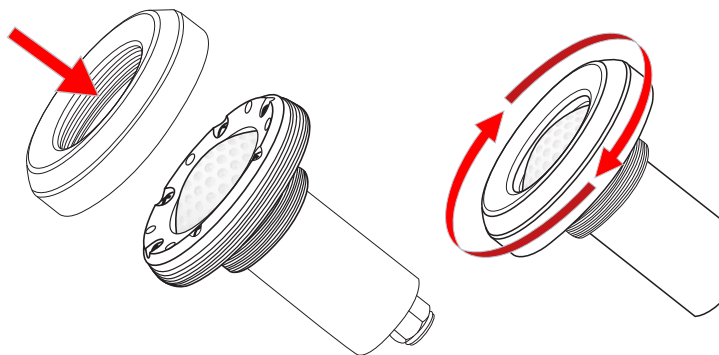


14

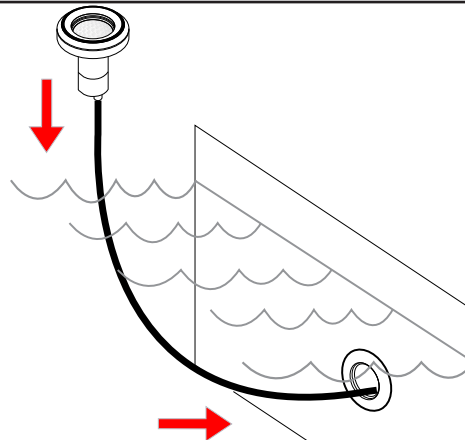


15

PUSH IN
THEN TWIST

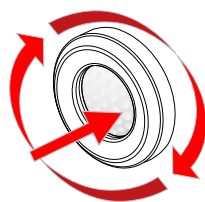

16

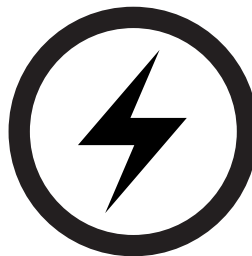

TURN ON MAIN
POWER SOURCE
AT BREAKER