

## How to Replace External CAM Assembly

To replace the lock on Skimlite's external locking poles, it normally only requires replacing the female fitting or the ferrule fitting. In the event you want to replace all three, follow these steps:

Step 1. Disassemble the pole. Take the pole with the fitting and place it into a vice. Do not place the pole portion (tube) in the vice, just the fitting (as shown in the video).

Step 2. Take a hacksaw or metal cutting tool and cut the pole just below the male fitting on the pole. Then take a pocket knife or file and remove the inside and outside burrs.

Step 3. Take the new male fitting and start it onto the pole. You will then take the pole and tap it on a hard surface (concrete floor or deck) until the metal pole is even with the male fitting shoulder or within 1/16 inch.

Step 4. Now take the female fitting and place it on the connecting pole and then place the ferrule fitting. Slide the two poles together. Move ferrule fitting to lock the pole.

You've now installed an external CAM assembly for a Skimlite pole.

Skimlite has many helpful videos which we have posted on our website ([poolweb.com](http://poolweb.com)). You can also find them on the Skimlite site or on Youtube.

