

How to Replace Lock Assembly on the Dually Pole

Step 1. Disassemble the pole. Take the female fitting and slide it onto the pole, followed by the ferrule fitting. Then take the CAM shoe, install it onto the CAM plug and rotate it, finding the unlocked position.

Step 2. Then take the ferrule fitting and install it over the top of the CAM shoe.

Step 3. Take that portion of the pole and slide it into the other pole. Rotate it to the right and to the left. This is getting a lock position on both internal and external.

Step 4. Take the female fitting and move it over the ferrule and tighten the outside lock assembly.

This applies to both the larger portion of the pole and the smaller portion of the Dually Pole. They both work the same.

Skimlite has many helpful videos which we have posted on our website (poolweb.com). You can also find them on the Skimlite site or on Youtube.

