

OBSOLETE PART NOTIFICATION

November 1, 2016

After this date, Blue-White will no longer manufacture this style Tube Assembly.

See steps below on how to upgrade your current pump.



Steps to Upgrade your Pump:

Step 1) Order Retro-fit Kit (PN 72000-550)

Step 2) Order new Tube Assembly, see upgrade replacement part numbers on back

Step 3) Place Adhesive Spacer Pad (PN 90012-399) onto Pump Head *


Step 4) Place new Clear Cover (PN 71000-156) onto Pump Head

* Placement instructions shipped with Retro-fit Kit.

NOTE: Tube Nuts (PN C-330-6) remain the same.
Tube Nuts will fit old & new style Tube Assemblies.

Retro-fit Kit
(PN 72000-550)
REQUIRED for
use of **NEW**
Tube Assembly
on **OLD** Pump Head

Kit includes
Adhesive Spacer Pad
(PN 90012-399)
and Clear Cover
(PN 71000-156)

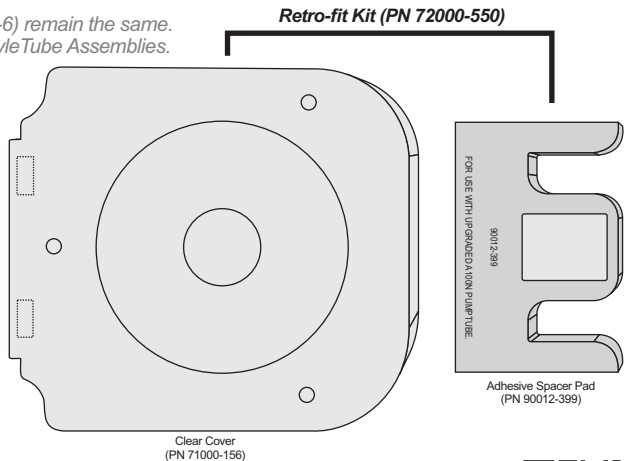

Order Upgrade Kit:

This Kit (72000-550) can be purchased through your distributor or online at:

www.bluewhiteparts.com search for 72000-550

COST: \$6.00 USD

Download this document:

<http://blue-white.com/blue-white-products/a-100n-flexflo-peristaltic-pump/>



Compatibility Flow Chart


NEW Clear Cover

Shorter and thicker adapter support tabs.

Must be used with new Tube Assemblies.

Can be used with old Tube Assemblies.

Began Shipping Sept. 1, 2015

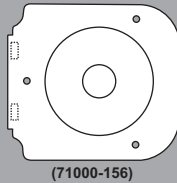


OLD Clear Cover

Longer adapter support tabs.

TIP! Tabs can be removed for use with new Tube Assemblies.

NOTE: This version is obsolete. Stopped Shipping Sept. 1, 2015

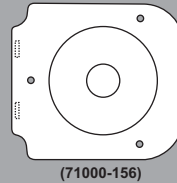


Pump Head

Thicker wall adapter retention slots.

Old style Tube Assemblies do not fit.

New style Pump Head can be installed on older pumps.

Began Shipping Sept. 1, 2015

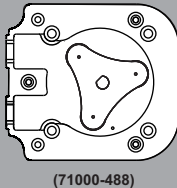


Pump Head

Thin wall adapter retention slots.

New style Tube Assemblies REQUIRE Adhesive Spacer Pad PN 90012-399 to be used with this Pump Head.

Old style Pump Head can be installed on newer pumps.

NOTE: This version is obsolete. Stopped Shipping Sept. 1, 2015

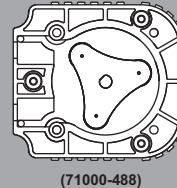


Tube Assembly

Adapter installation slots are wide.
Adapters are marked with the replacement part number.

Can be installed on new style Pumps Heads or on old style Pump Heads with Retro-fit Kit PN 72000-550

NOTE: Quick Disconnect is Discontinued


Began Shipping Sept. 1, 2015

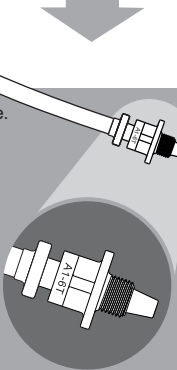

Tube Assembly

Adapter installation slots are narrow.
Adapters are marked with flow direction arrows.

Can be installed on old style Pump Heads only.

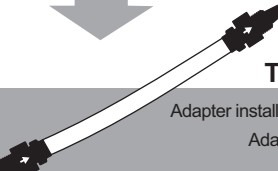

END-OF-LIFE DATE: November 1, 2016.
After this date, Blue-White will no longer manufacture this type of Tube Assembly.
See Chart below for replacement part numbers.

	NEW CATALOG NUMBER	DESCRIPTION	OLD CATALOG NUMBER	DESCRIPTION
NORPRENE	A1-4T	Tube Assembly A-100N (-4T) 1/4" OD 3/8"OD Tube Compression Fitting	A-002N-4T	Tube Assembly A-100N (-4T) 1/4" OD 3/8"OD Tube Compression Fitting
	A1-6T	Tube Assembly A-100N (-6T) 3/8" OD 3/8"OD Tube Compression Fitting	A-002N-6T	Tube Assembly A-100N (-6T) 3/8" OD 3/8"OD Tube Compression Fitting
	A1-7T	Tube Assembly A-100N (-7T) 7/16" OD 3/8"OD Tube Compression Fitting	A-002N-7T	Tube Assembly A-100N (-7T) 7/16" OD 3/8"OD Tube Compression Fitting
NORPRENE CHEMICAL	A1-8T	Tube Assembly A-100N (-8T) 7/16" OD 3/8"OD Tube Compression Fitting	A-002N-8T	Tube Assembly A-100N (-8T) 7/16" OD 3/8"OD Tube Compression Fitting
	A1-1T	Tube Assembly A-100N (-1T) 1/4" OD 3/8"OD Tube Compression Fitting	A-002N-1T	Tube Assembly A-100N (-1T) 1/4" OD 3/8"OD tube compression fitting
TYGOTHANE	A1-2T	Tube Assembly A-100N (-2T) 3/8" OD 3/8"OD Tube Compression Fitting	A-002N-2T	Tube Assembly A-100N (-2T) 3/8" OD 3/8"OD Tube Compression Fitting
	A1-3T	Tube Assembly A-100N (-3T) 7/16" OD 3/8"OD Tube Compression Fitting	A-002N-3T	Tube Assembly A-100N (-3T) 7/16" OD 3/8"OD Tube Compression Fitting
FKM	A1-5T	Tube Assembly A-100N (-5T) 5/16" OD 3/8"OD Tube Compression Fitting	A-002N-5T	Tube Assembly A-100N (-5T) 5/16" OD 3/8"OD Tube Compression Fitting