


WARNING: Before starting make sure to turn off power to the spa by switching the breaker to the off position. If you unable to figure out how to do so please contact your local professional.

Step 1: Undo (4) cover screws and remove cover.

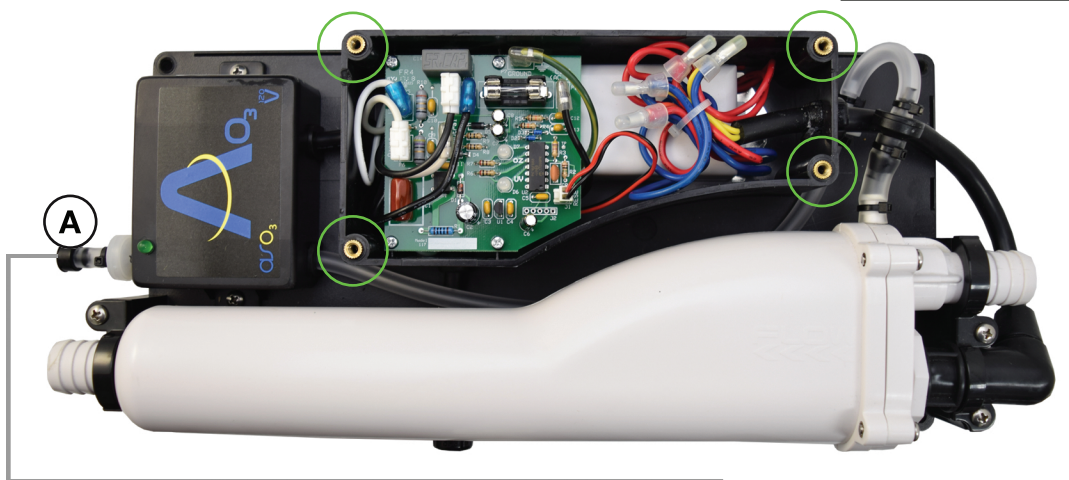

PARTS INCLUDED:

- Ⓐ Air inlet with 1/8"x1/8" check valve
- Ⓑ 1/8"x1/8" & 1/8"x1/4" check valve Assembly
- Ⓒ Clamps (5)




Step 2: Remove and replace the air inlet with check valve B. Attach new clamp securely C .

Step 3: Cut cable tie and remove tubing from the UV chamber barb (D) as well as the second inline check valve. (E)

NOTE: If your unit only has (1) inline check valve you will need to cut the tubing 3" down from the existing check valve. (cut line F)

Step 4: Fit new check valve assembly B onto UV chamber barb. Loop underneath power cord and connect check valve to the tubing. Attach clamp C securely at both ends.

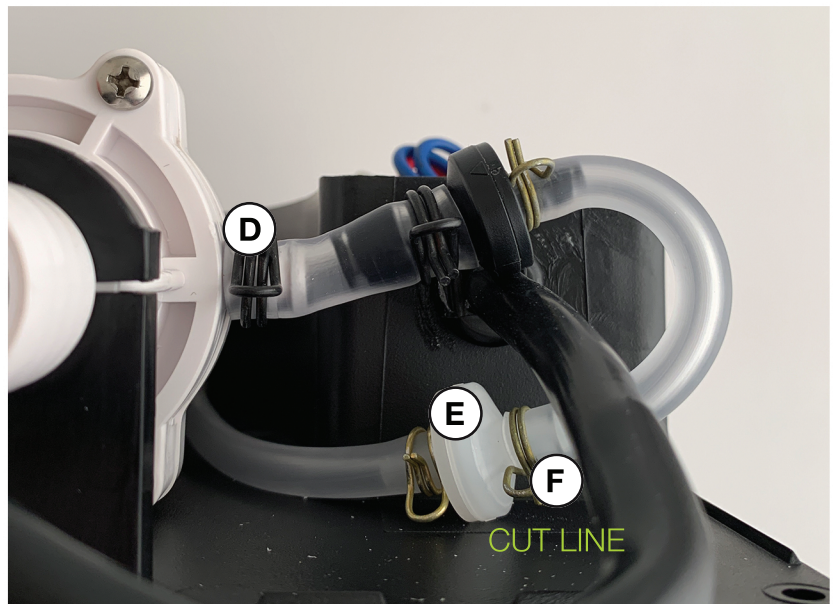

Step 5: Reattach cover to AquaNova and connect power cord. Check for bubbles..