






H₂O Hoops

ASSEMBLY INSTRUCTIONS

Please read over the step-by-step instructions to ensure easy and quick assembly.

UNIT ASSEMBLY INSTRUCTIONS

1. Apply base decal onto front of base and fill with water.
2. Place end of post with plastic insert into hole on front section of base so that the square hole in the insert seats over the square impression on the bottom of the base. Slip compression ring (A) over post and seat in groove on top of base Fig.1. Slip compression nut (B) over post and tighten onto threaded base securing compression ring (A) in place.
3. Insert mounting block (C) into 4 holes on back of backboard. Install 4 - 1/4" X 3/4" bolts through rim holes and backboard, and screw into the mounting block. Insert 2 - 1/4" X 1" bolts into hex holes on mounting block and loosely install 2 white hand knobs. Slip backboard / mounting block assembly onto top of post and adjust to desired height and tighten 2 white hand knobs.
4. Install post cap (E) and attach net to eyelets on rim. Tighten 4 rim bolts with wrench

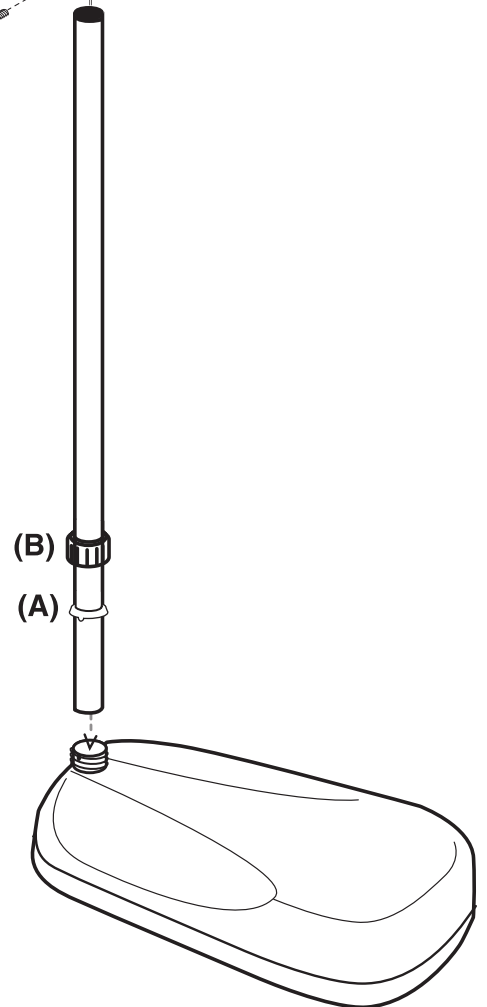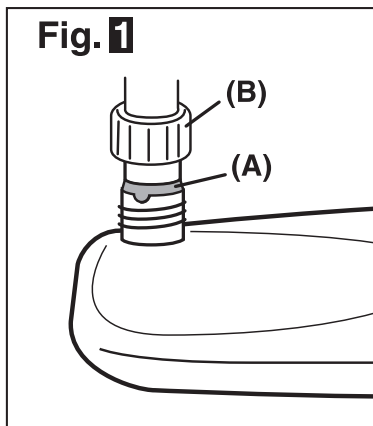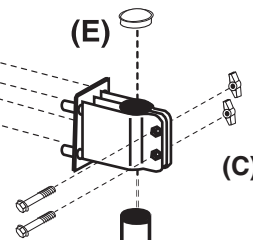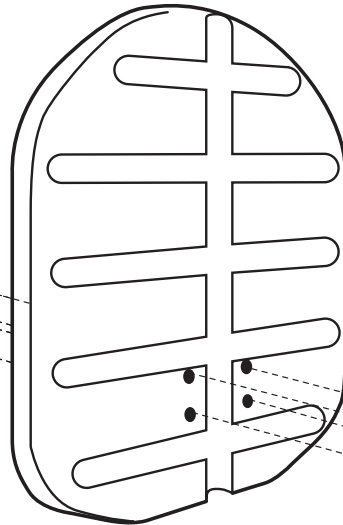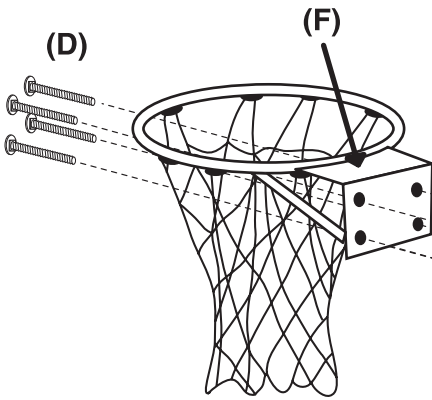

For assistance call:
1-800-798-9646