## GRIFF'S GUARD STATION® - FULL HEIGHT MODEL ASSEMBLY INSTRUCTIONS:

General Notes: Your Griff's Guard Station® - Full Height Model has been shipped with some parts pre-assembled at our factory. Prior to beginning, please inspect all pieces and boxes to ensure that parts were not damaged in transit. If damage is detected, notify your distributor/freight carrier immediately as a freight claim must be filed within a certain time frame from receipt of goods. Take a moment to review the front pages of these assembly drawings to familiarize yourself with the tower components and to verify all parts have been received. You'll notice that certain pieces are unique and will be depicted as left or right hand side (as viewed facing the pool from behind the chair).

## Assembly Instructions:

Note: It is recommended that all nuts and bolts be left hand tight until entire assembly is complete, unless otherwise instructed. It is recommended that two people assemble this chair due to the the size and weight of some of the parts. Please refer to parts drawings on page 2 for parts layout.

- 1. Attach the front posts (ref. #2) to the front stair riser assemblies (ref. #6) using (2) split tee assemblies each (refer to detail
- 2. Attach the side cross braces (ref. #5) and side seat support bars (ref. #4) to front posts using (2) split tee assemblies each.
- 3. Slide the umbrella ring guide (ref. #15) onto one of the top side cross braces. Secure onto cross brace with 5/16" set screw (ref. #26). Install thumb screw (ref. #25) into threaded hole of smaller diameter hoop.
- 4. Attach the rear legs (ref. #1 and 1A) to the side cross brace members using (2) split tee assemblies each. Please note the direction of the welded tabs as shown on page 2.
- 5. Attach the side "L" braces (ref. #7) to the rear posts and side cross braces using (2) split tee assemblies each.
- 6. Lay one of the side frames on the ground with the fiberglass decking mounting tabs upward. Attach the top and bottom rear cross braces (ref. #3) to the side frame using (2) split tee assemblies. Tighten the hardware on these split tees fully!
- 7. Rotate the assembly so that the rear cross braces are now laying on the ground and the side frame is facing upwards. A second person should help support the assmbly while in this position to prevent it from tipping. In lieu of a second person, the assembly can be secured to a wall or fence for support.
- 8. Attach the opposite side frame to the rear cross braces using (2) split tee assemblies. Tighten the hardware on these split tees fully!
- 9. Rotate the whole assembly to an upright postion. Install the rubber sleeves (ref. #14) onto front riser portion of the chair, and rubber bumpers (ref. #13) onto rear posts of the chair.
- 10. Install seat back rest decking (ref. #11) onto tabs welded to the rear posts of the chair. Secure using (4) 3/8"-16 x 1 3/4" carriage bolts (ref. #21), 3/8" lock washers (ref. #19), and 3/8" cap nuts (ref. #18). Bolt should pass through the slots in the decking and holes in the tabs.
- 11. Install top seat frame (ref. #9) to the side seat support bars (ref. #4) using (4) 3/8"-16 x 2 1/2" carriage bolts (ref. #23), 3/8" lock washers (ref. #19), and 3/8" cap nuts (ref. #18). Cap nuts should be on the outside of the chair frame.
- 12. Secure seat decking (ref. #11) into seat frame using (2) 3/8"-16 x 1 3/4" carriage bolts (ref. #21), 3/8" lock washers (ref. #19), and 3/8" cap nuts (ref. #18). Bolt should pass through the slots in the decking and slotted holes in the frames.
- 13. Install main platform deck frame (ref. #8) on to front and rear posts using (4) 3/8"-16 x 2 1/2" carriage bolts (ref. #23), 3/8" lock washers (ref. #19), and 3/8" cap nuts (ref. #18). Cap nuts should be on the outside of the chair frame.
- 14. Secure main decking (ref. #10) into main deck frame using (2) 3/8"-16 x 1 3/4" carriage bolts (ref. #21), 3/8" lock washers (ref. #19), and 3/8" cap nuts (ref. #18) with footprints facing the front of the chair. Bolts should pass through the slots in the decking and slotted holes in the frames.
- 15. Install upper step frame (ref. #9) to front riser assembly (ref. #6) using (4) 3/8"-16 x 2 1/2" carriage bolts (ref. #23), 3/8" lock washers (ref. #19), and 3/8" cap nuts (ref. #18). Cap nuts should be on the outside of the chair frame.
- 16. Secure step decking (ref. #11) in to step frame using (2) 3/8"-16 x 1 3/4" carriage bolts (ref. #21), 3/8" lock washers (ref. #19). and 3/8" cap nuts (ref. #18). Bolt should pass through the slots in the decking and slotted holes in the frames.
- 17. Repeat step 15 and 16 for lower step (use decking with words "KEEP CLEAR" for the lower step).
- 18. Fully tighten all hardware at this time.
- 19. Place umbrella base holder (ref. # 16) on main platform decking directly underneath the umbrella ring guide already attached to side frame. The hole in the bottom of the holder should align with the space between the "T" bar of the fiberglass decking. Attach holder using 3/8" -16 X 3/4" hex head bolt (ref. # 22), 3/8" flat washer (ref. #20), 3/8" lock washer (ref. # 19), and 3/8" hex head nut (ref. # 24).
- 20. Attach rescue tube holder (ref. # 27) to left or right front side frame using 3/8" 16 X 2 3/4" carriage bolt (ref. # 17), 3/8" flat washer (ref. # 20), 3/8" lock washer (ref. # 19), and 3/8" cap nut (ref. # 18).

Maintenance Notes: In order to ensure that your new lifeguard chair looks good and performs good. Paragon recommends that all stainless steel parts be cleaned on a regular basis to prevent corrosion. Further, all parts, specifically plastic and fiberglass parts, should be inspected on a regular basis for wear. Any worn part should be replaced immediately. Please contact your local Paragon distributor for more information regarding recommended cleaning/maintenance programs, installation questions, or for replacement


© 2009 Paragon Aquatics





LaGrangeville, NY 12540 Phone: (845) 463-7200 Fax: (845) 463-7291


App by: Date: Drawing Number: Tolerance: Scale: Rev Ltr: Sheet:	/Schedul		Material: See N	Griff's Guard Station			Date: 11/17/09	Dwn by: RV
App by Date.	et:	Sheet:	Rev Ltr:	Scale:		Drawing Number:	Date:	App by:
SF         11/17/09         AI-LG40.27         (Unless noted) N/A         N/A         A         3	3 of 3	3	Α	N/A	1` ′	AI-LG40.27	11/17/09	SF

## Assembly Instructions Griff's Guard Station® - Full Height Model

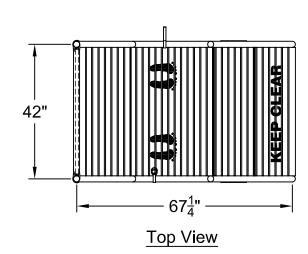

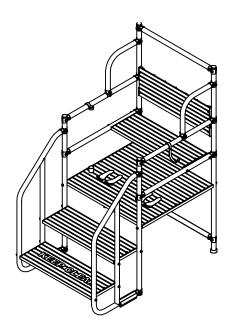

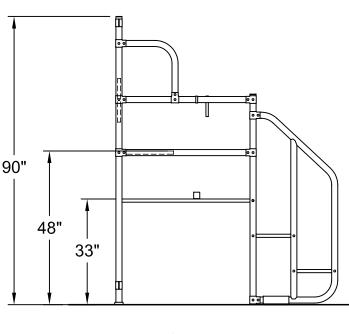

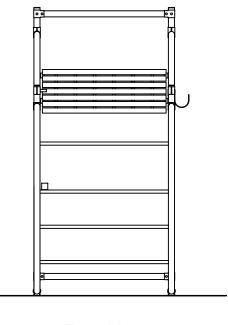

Side View

Front View

## Dear Valued Customer,

Thank you for your recent purchase of our Griff's Guard Station<sup>®</sup>- Full Height Model. The following instructions will assist you in the assembly of your chair. Page one of this document provides a top, side, and front view of how your chair will look when assembled and also gives approximate overall dimensions. Page two is an isometric 3-dimensional drawing which will aid in parts identification as well as parts locations. Page three provides step by step written instructions on how to assemble the chair. We trust that you will enjoy much satisfaction with the equipment you have purchased, and thank you for choosing Paragon deck equipment!


C)2009 Paragon Aquatics



1351 Route 55
LaGrangeville, NY 12540
Phone: (845) 463-7200
Fax: (845) 463-7291

Dwn by:	Data	Titl
,		
RV	11/17/09	
App by:	Date:	Dra

by:	Date: 11/17/09		Griff's Guard Station <sup>®</sup> Full Height Model			Material: See Notes/Schedule	
y:	Date:	Drawing Number:	Tolerance:	Scale:	Rev Ltr:	Sheet:	
	11/17/09	AI-I G40 27	(Unless noted)	N/A	A	1 of 3	

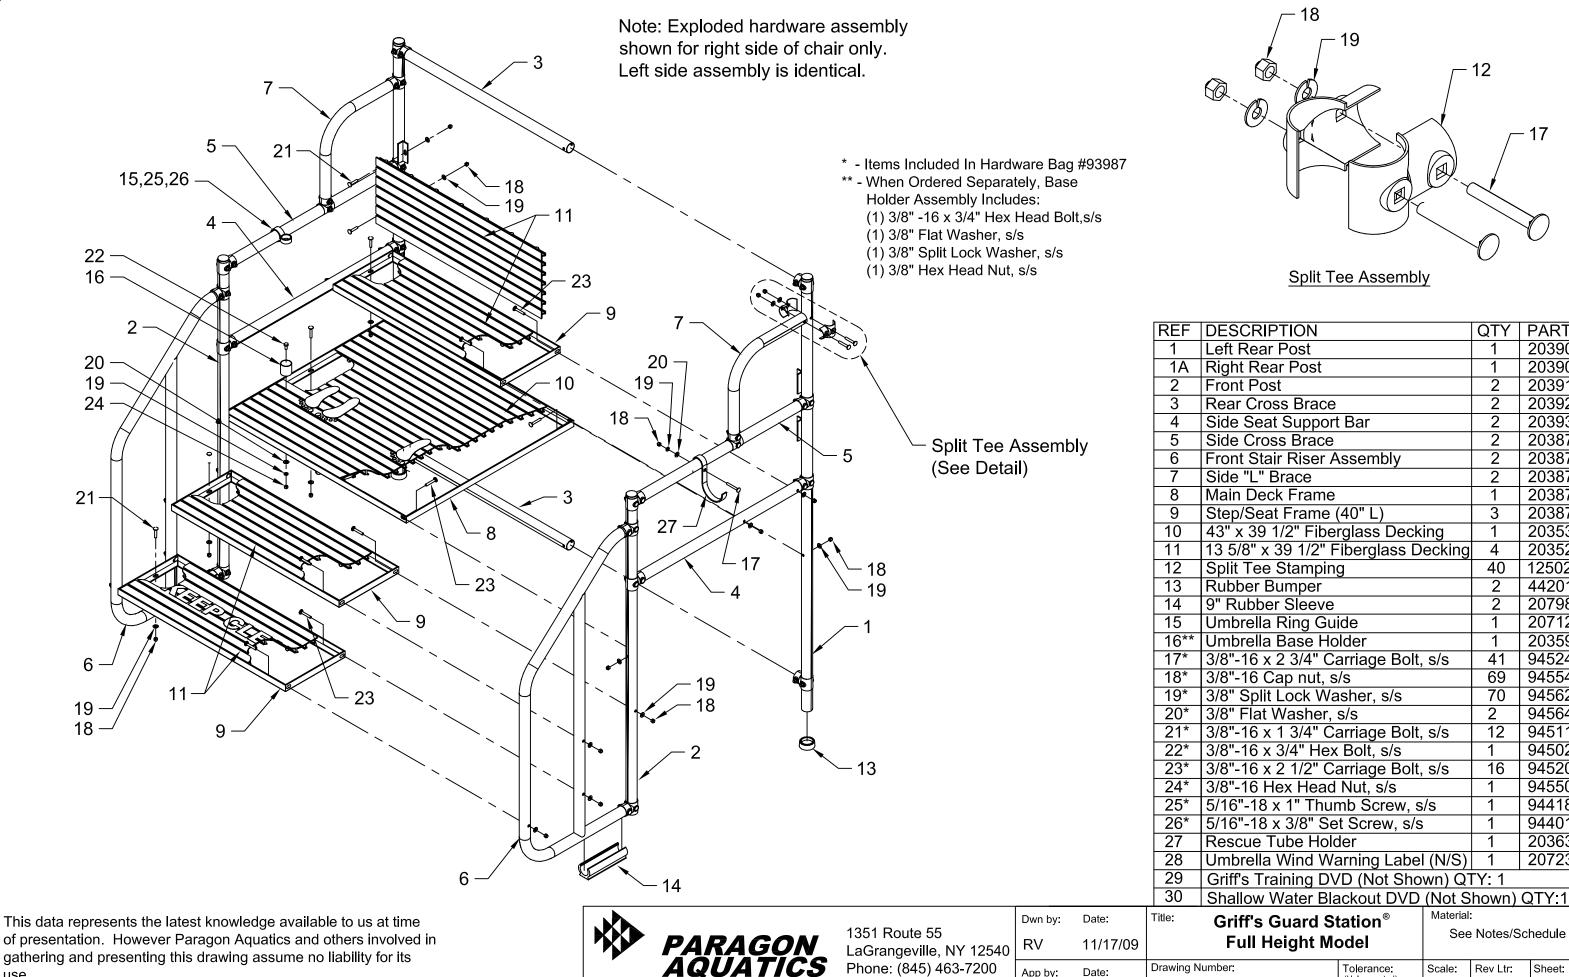

12

Split Tee Assembly

DESCRIPTION	QTY	PART#
Left Rear Post	1	20390L
Right Rear Post	1	20390R
Front Post	2	20391
Rear Cross Brace	2	20392
Side Seat Support Bar		20393
Side Cross Brace	2	20387-1
Front Stair Riser Assembly	2	20387-2
Side "L" Brace	2	20387-3
Main Deck Frame		20387-4
Step/Seat Frame (40" L)	3	20387-5
		20353
13 5/8" x 39 1/2" Fiberglass Decking	4	20352
Split Tee Stamping	40	12502
Rubber Bumper	2	44201
9" Rubber Sleeve	2	20798
Umbrella Ring Guide		20712
Umbrella Base Holder	1	20359
3/8"-16 x 2 3/4" Carriage Bolt, s/s	41	94524
3/8"-16 Cap nut, s/s	69	94554
	70	94562
	2	94564
		94511
	-	94502
3/8"-16 x 2 1/2" Carriage Bolt, s/s	16	94520
3/8"-16 Hex Head Nut, s/s	1	94550
5/16"-18 x 1" Thumb Screw, s/s	_	94418
5/16"-18 x 3/8" Set Screw, s/s	1	94401
Rescue Tube Holder	1	20363
Umbrella Wind Warning Label (N/S)	1	20723
Griff's Training DVD (Not Shown) Q1	ΓY: 1	
	Right Rear Post Right Rear Post Front Post Rear Cross Brace Side Seat Support Bar Side Cross Brace Front Stair Riser Assembly Side "L" Brace Main Deck Frame Step/Seat Frame (40" L) 43" x 39 1/2" Fiberglass Decking 13 5/8" x 39 1/2" Fiberglass Decking Split Tee Stamping Rubber Bumper 9" Rubber Sleeve Umbrella Ring Guide Umbrella Base Holder 3/8"-16 x 2 3/4" Carriage Bolt, s/s 3/8"-16 Cap nut, s/s 3/8" Split Lock Washer, s/s 3/8" Flat Washer, s/s 3/8"-16 x 1 3/4" Carriage Bolt, s/s 3/8"-16 x 2 1/2" Carriage Bolt, s/s 3/8"-16 x 2 1/2" Carriage Bolt, s/s 3/8"-16 Hex Head Nut, s/s 5/16"-18 x 1" Thumb Screw, s/s 5/16"-18 x 3/8" Set Screw, s/s Rescue Tube Holder Umbrella Wind Warning Label (N/S)	Left Rear Post       1         Right Rear Post       1         Front Post       2         Rear Cross Brace       2         Side Seat Support Bar       2         Side Cross Brace       2         Front Stair Riser Assembly       2         Side "L" Brace       2         Main Deck Frame       1         Step/Seat Frame (40" L)       3         43" x 39 1/2" Fiberglass Decking       1         13 5/8" x 39 1/2" Fiberglass Decking       4         Split Tee Stamping       40         Rubber Bumper       2         9" Rubber Sleeve       2         Umbrella Ring Guide       1         Umbrella Base Holder       1         3/8"-16 x 2 3/4" Carriage Bolt, s/s       41         3/8"-16 Cap nut, s/s       70         3/8" Split Lock Washer, s/s       70         3/8"-16 x 1 3/4" Carriage Bolt, s/s       1         3/8"-16 x 2 1/2" Carriage Bolt, s/s       1         3/8"-16 Hex Head Nut, s/s       1         5/16"-18 x 1" Thumb Screw, s/s       1         5/16"-18 x 3/8" Set Screw, s/s       1         Rescue Tube Holder       1

N/A

PARAGON AQUATICS

Fax: (845) 463-7291

App by: SF 11/17/09 **Griff's Guard Station® Full Height Model** Tolerance: (Unless noted)

AI-LG40.27

See Notes/Schedule Scale: Rev Ltr: Sheet:

2 of 3

(C)2009 Paragon Aquatics